


ICM standalone operation

Description applies to the modules manufactured 2020-2023.


- 1) Remove the fuse 10A.

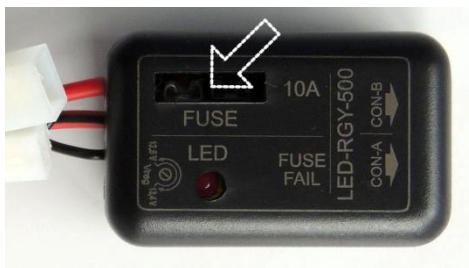

- 2) Carefully open the cover.
Be careful to don't damage the fixing pins on the corners !!!



- 3) Replace the jumper „to back” (from „normal” operations to „standalone”).

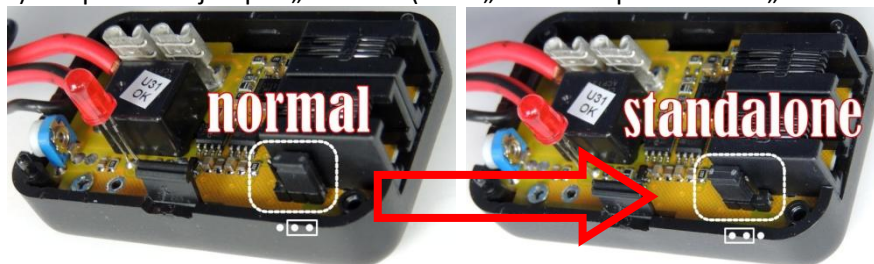

- 4) Close the cover with particular attention to placing correct of the outgoing wires in the slots.



- 5) Insert the fuse 10A.



quasar
electronics



QUASAR Electronics

- ✉ Cieslewskich 25k Street
03-017 Warsaw, Poland
- ☎ +48 22 4273141...44
- @ office@quasarelectronics.pl
- 🌐 www.quasarelectronics.pl/en