Installation manual MCB-CLICK-CAN



1) Find CAN-Bus wires.



2) Identify wires CAN-H and CAN-L and untwist wires on 5cm.



3) Connect attached cable harness to the module.




4) Insert module properly between CAN-Bus wires.



5) Attach the wires using attached clamps.



6) Properly mounted module with described wires.

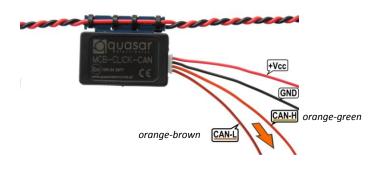

QUASAR Electronics



Cieslewskich 25k Street 03-017 Warsaw, Poland



+48 22 4273141...44



biuro@quasarelectronics.pl www.quasarelectronics.pl